



DGQG01

Battery replacement procedure

1. Flip the Master to see its back side

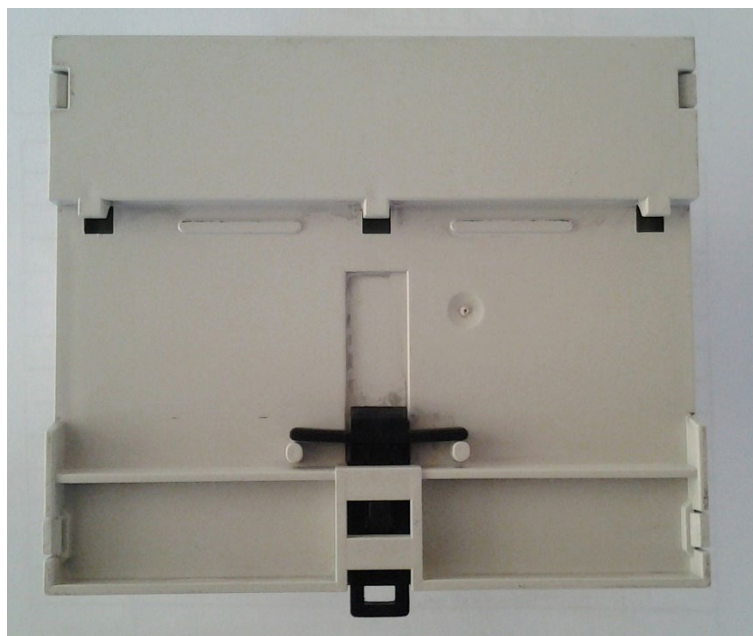


2. Remove the back cover

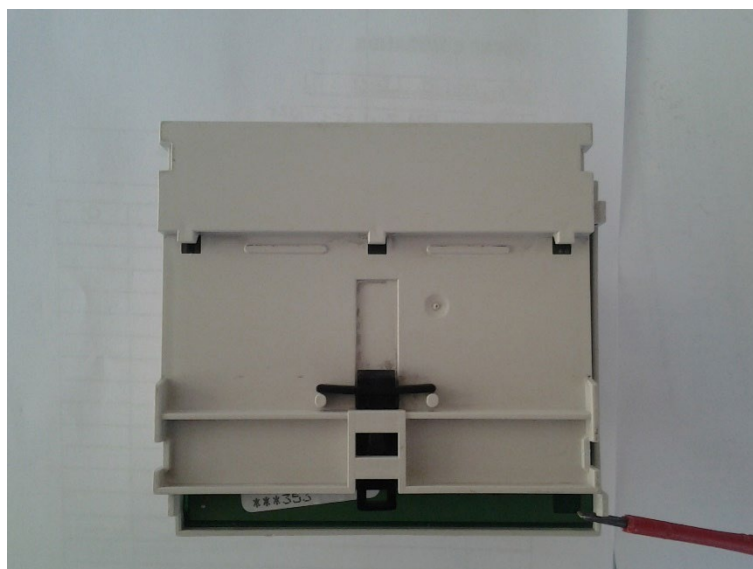


DGQG01

Battery replacement procedure

3. Carefully pull the electronic print. You will then see the battery

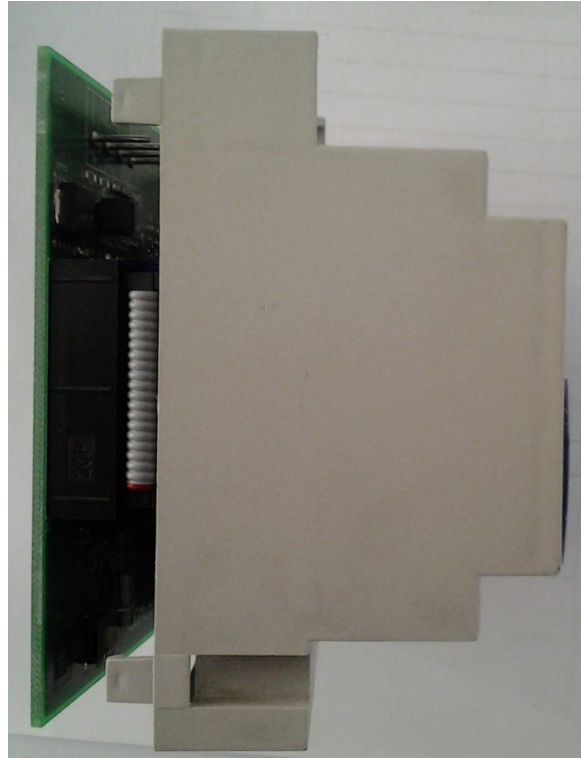

4. Remove the battery with care to prevent any short-circuit

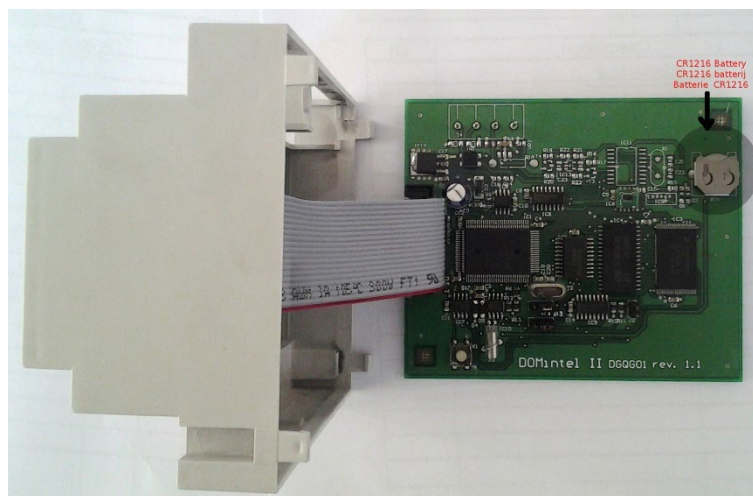

DGQG01

Battery replacement procedure

5. This is a 3V CR1216 battery. Repeat these steps to carefully close the module.

