


DGQG01

Battery replacement procedure

1. Flip the Master to see its back side

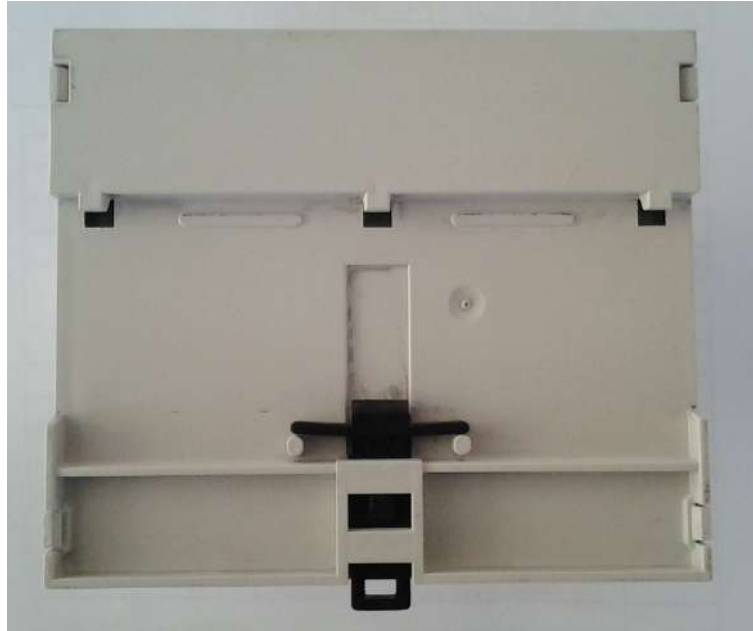


2. Remove the back cover



DGQG01

Battery replacement procedure

3. Carefully pull the electronic print. You will then see the battery

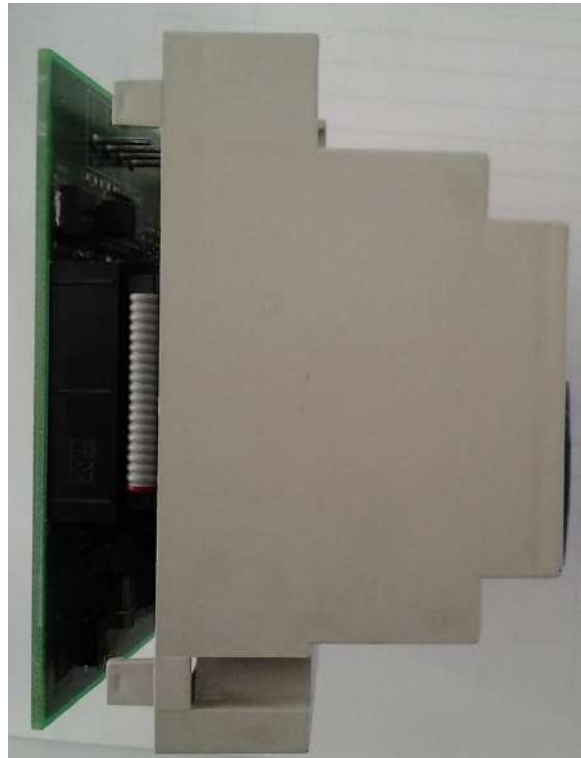


4. Remove the battery with care to prevent any short-circuit



DGQG01

Battery replacement procedure


5. This is a 3V CR1216 battery. Repeat these steps to carefully close the module.

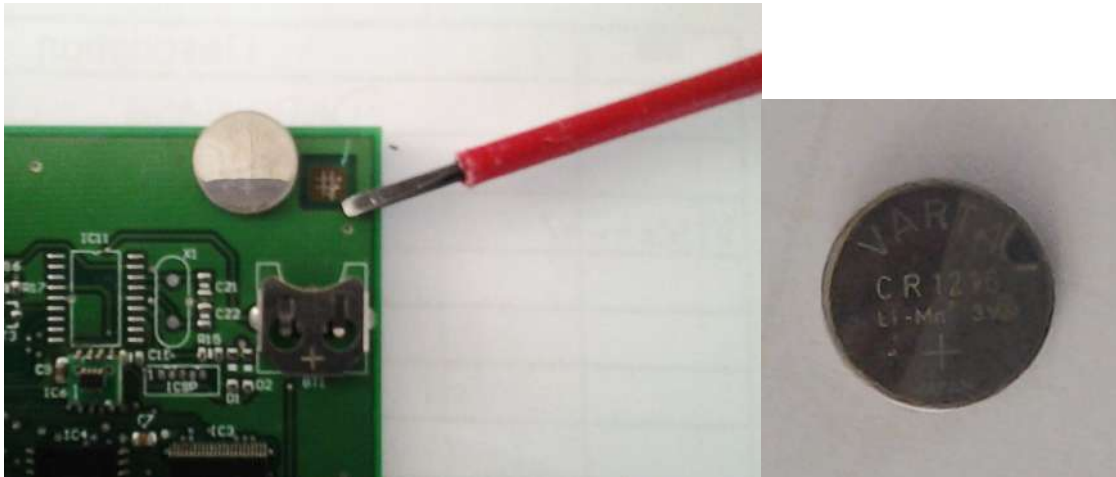

DGQG01

Procédure de changement de pile

1. Retournez le Master pour voir sa face arrière

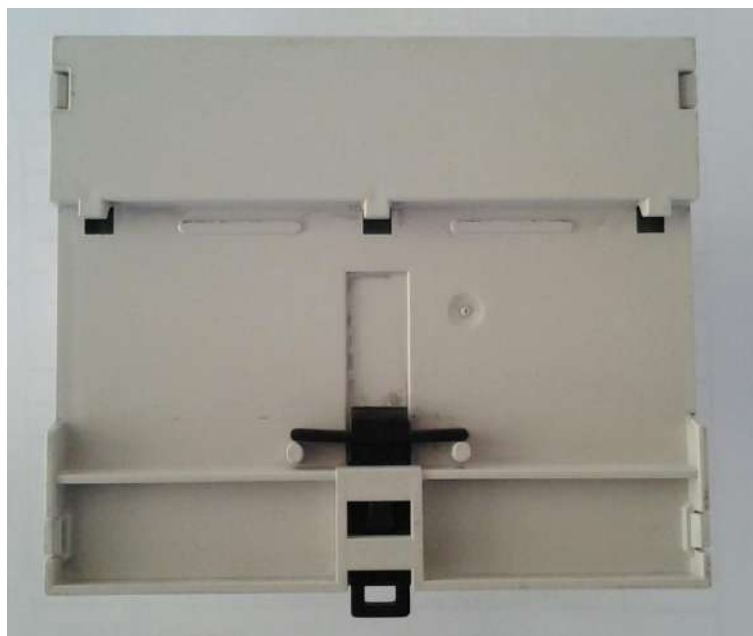


2. Retirez la face arrière



DGQG01

Procédure de changement de pile

3. Tirez la carte électronique avec précaution. Vous apercevez alors la pile.

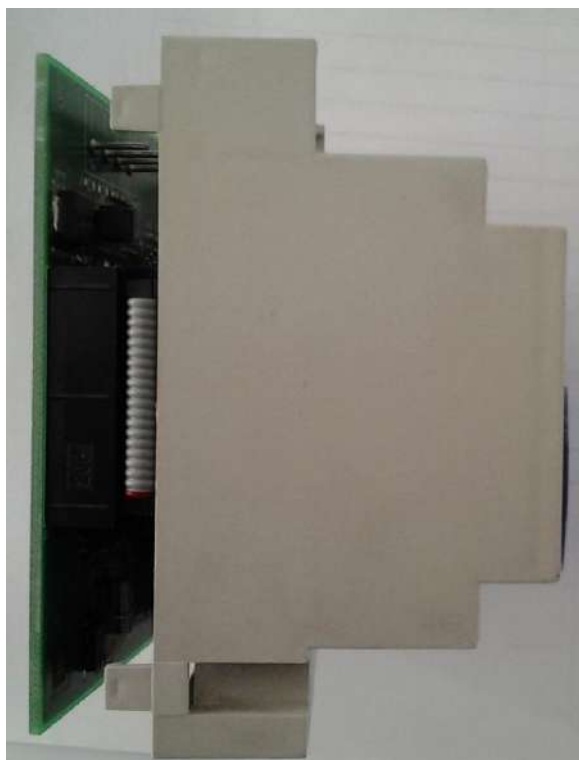


4. Retirez la pile avec précaution pour éviter tout court-circuit.



DGQG01

Procédure de changement de pile


5. C'est une pile 3V CR1216. Répétez les étapes pour refermer délicatement le boîtier.

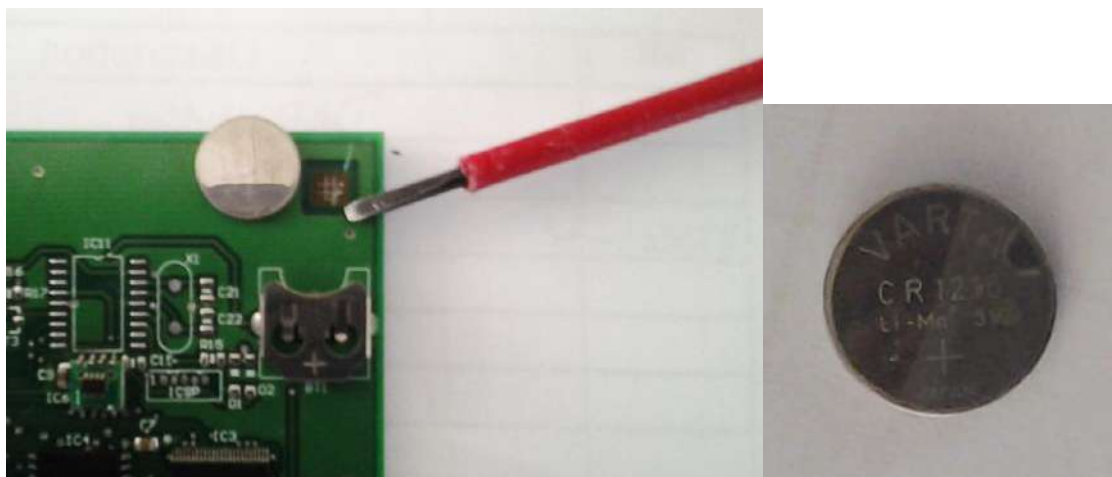

DGQG01

Procedure voor batteriivervangng

1. Draai de Master om om de achterkant te zien

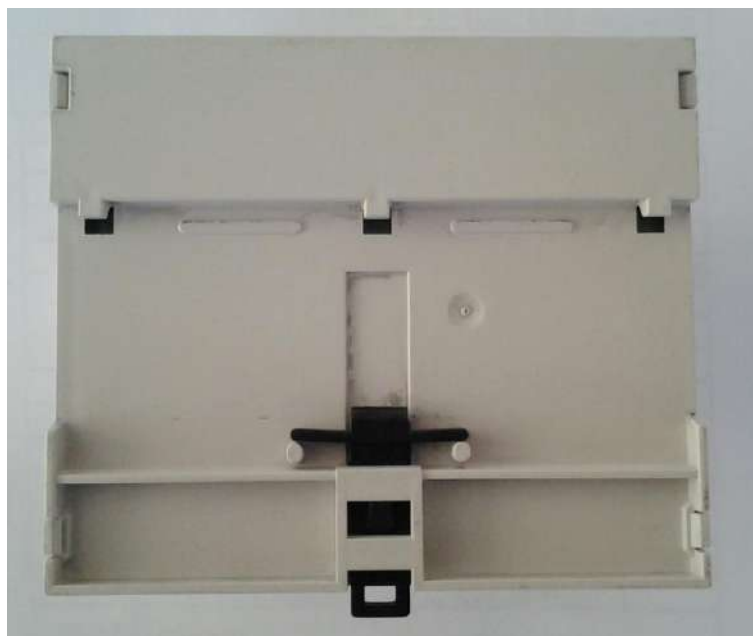


2. Verwijder de achterklep



DGQG01

Procedure voor batterijvervanging

3. Trek voorzichtig aan de elektronische print. Je ziet dan de batterij

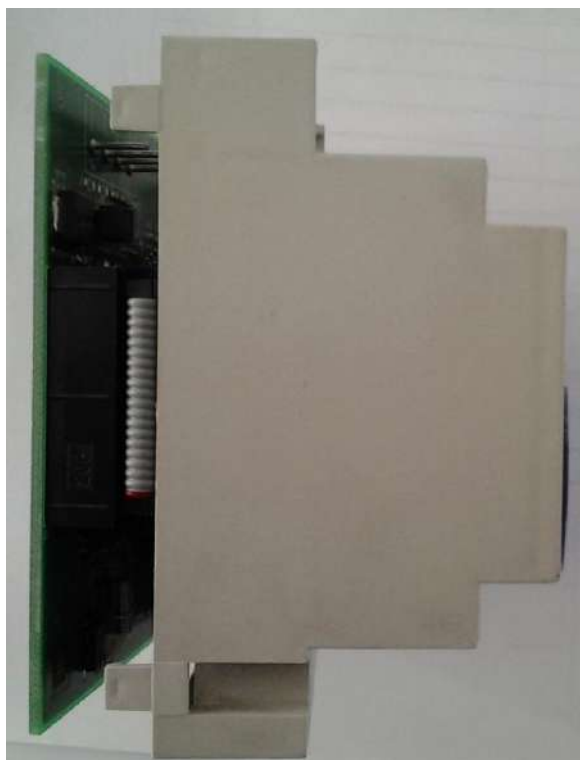

4. Verwijder de batterij voorzichtig om kortsluiting te voorkomen



DGQG01

Procedure voor batteriivervangning

5. Dit is een 3V CR1216 batterij. Herhaal deze stappen om de module voorzichtig te sluiten.

