


## DGQG02

### Introduction

DGQG02 is the main/central module of a Domintell2 system. This “all-in-one” master enlarges the range of masters besides the historical DGQG01. This module has some embedded inputs/outputs and also allows interaction with other Domintell2 modules.

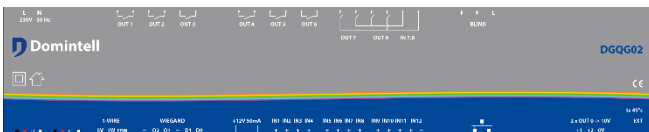


### Specifications

- Minimal version of the GoldenGate software: **1.11.0**.
- Minimal version of the module's firmware: **v1**.
- Only one DGQG02 module can be connected on Domintell2 bus. No other DGQG0x module can be connected at the same time on the Domintell2 bus.
- Module power supply: 240Vac/50Hz (or 120Vac/60Hz).
- Module's consumption: 7W (30mA; 70mA peak).
- Dimension : L-212 mm (12 modules)
- Encrypted communication over WebSocket/TCP (TLSv1.2).
- 1x Ethernet port 10Mb/100Mb (RJ-45).
- 11x isolated inputs with same common (dedicated 12Vdc output available to be looped into inputs).
- 1x isolated input fully free potential (external voltage from 9 to 24Vdc must be used).
- 1x 1-Wire® input that can be used with dedicated temperature sensors or access control device. Integrated 5Vdc power supply.

- 1x Wiegand® input to connect one access control device + 2x open-collector outputs can be used to connect feedback LEDs (granted or rejected access).
- 2x 0-10 volts or 1-10 volts outputs (e.g. to control light dimmers).
- 6x monopolar 16 A (R) outputs.
- 2x bipolar 2 x 8 A (R) outputs.
- 1x shutter output (e.g. to control 2-way AC blinds, valves, engines, etc.).

### Wiring diagrams

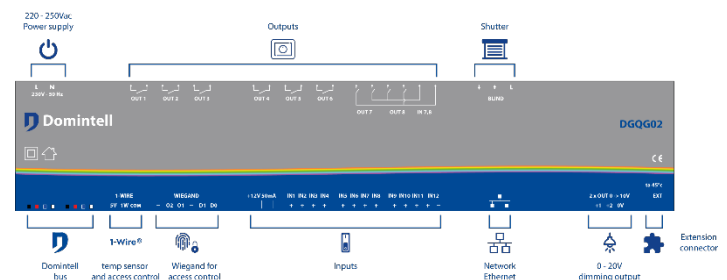


### Isolation of the input

Inputs are grouped by type and these groups are isolated to each other's. Terminals with the same color key have the same common.




\* Common terminal of 1-Wire® connector cannot be linked with '-' terminals of Wiegand® connectors (or any other common terminals of the module).

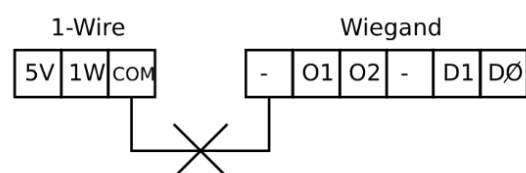


# DGQG02

## Wiring of inputs


The way inputs must be wired differs from DISM0x modules. Integrated 12Vdc output must be used. An external power supply **must** be used for the 12<sup>th</sup> input.

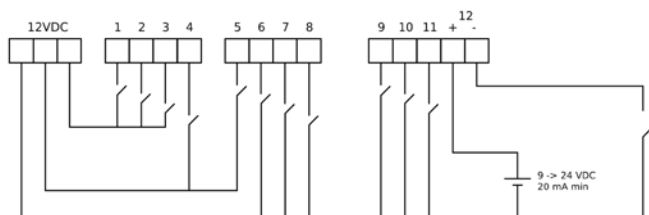


## Wiring of monopolar relays

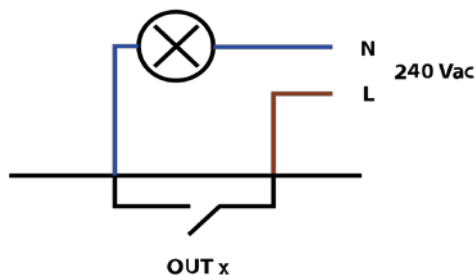


## Wiring of bipolar relays

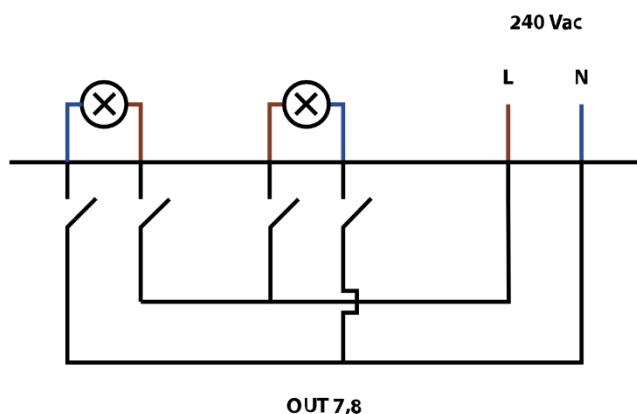

## Wiring of the shutter

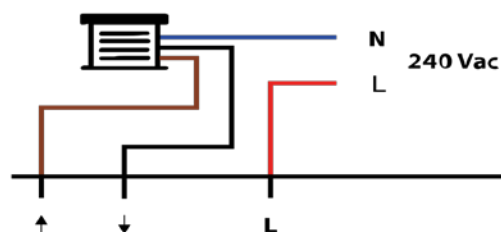


## Wiring of 0-10V outputs

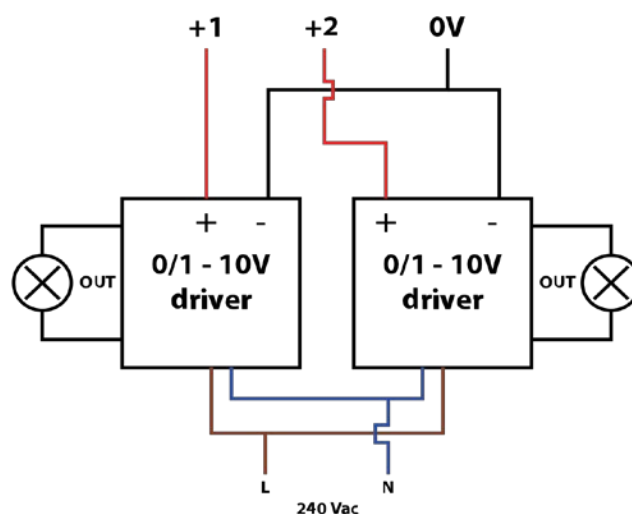

## Interfacing DGQG02 with other modules

Even if **DGQG02** has an integrated power supply, it **does not provide power supply for the bus**. If extra modules are connected on the bus, a DALI01 or DALI03 module must be installed.

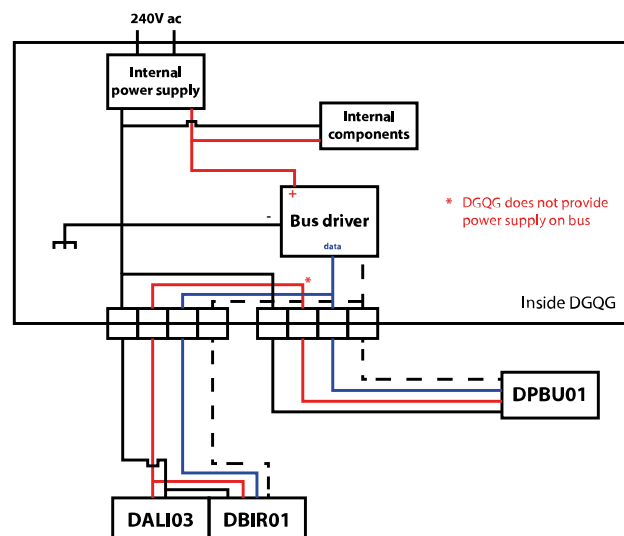

# DGQG02

## Configuration over Ethernet (aka DETH03 emulation)

- **DGQG02 does not have USB connector anymore.** Everything is done via Ethernet port (RJ-45)
- GoldenGate must be used to configure the installation. *Domintell2 configuration software* version 1.27.x and under does not support DGQG02.
- WebSockets are used to communicate (TCP protocol). Connections are encrypted (TLSv1.2) and password protected.
- If modem/router supports it, port forwarding can be configured automatically via UPnP to configure your installation through the Internet (not recommended).

## Controlling over Ethernet (aka DETH02 emulation)

- This feature can be disabled if not used.
- Up to two connections can be simultaneously opened using WebSockets (TCP protocol only). Connections are encrypted (TLSv1.2) and password protected.
- Dedicated smartphone application (like Domintell Pilot) can be used to control the installation.
- Older applications that were compatible with DETH02 can stop working with DGQG02 as UDP protocol is no more implemented.
- If modem/router supports it, port forwarding can be configured automatically via UPnP to configure your installation through the Internet (not recommended).

## List of services and ports

- 21/tcp: FTP server to update application and OS in DNET01. Also used to collect log files. *Do not forward this port in modem/router !*

- 17481/tcp: DETH02 emulation over secured WebSocket. Allows the control of the Domintell installation via a Smartphone using a NewGen application (Domintell Pilot, DomRemote, ...).
- 17483/tcp: DETH03 emulation over secured WebSocket. Allows the configuration of the Domintell installation using the GoldenGate software (replaces USB connection from DGQG01).
- 17483/udp: Only to be able to DISCOVER DETH03 emulation. *Do not forward this port in the modem/router !*
- Multicast group 239.255.44.49:17490: group to communicate with other Domintell modules. *Do not forward this port in the modem/router !*

## Port forwarding

Ports that can be forwarded : 17481/tcp, 17483/tcp

Ports that must **never** be forwarded : 17490/udp, 17481/udp, 17483/udp

## Limitations

- Only one DGQG02 can be connected to the bus at the same time. No other DGQG0x can be connected.
- **Module does not support PoE (Power-over-Ethernet).**
- DGQG02 is not compatible with Ethernet connection feature of Domintell2 software (due to lack of full UDP support for DETH03 emulation).
- DGQG02 does not have USB port anymore. The configuration is done using Ethernet port.
- DETH03 cannot be connected to Domintell bus when a DGQG02 is already connected.
- DETH03 emulation cannot be disabled.